


Job Briefing Board Colorado Material Station Schleyer-Weisman Yard



Spotting Instructions

- Spot empty trains on the west end of track 1 at the clearance marker.
- Take power through track 4 to the east end of track 5. Unless instructed otherwise.
- Rail cars can block Plant Road. Vehicles have an alternative route.
- Bad order cars go to track 5.
- Minimum of 5 handbrakes per track.
- Job comments supersede job briefing board instructions.

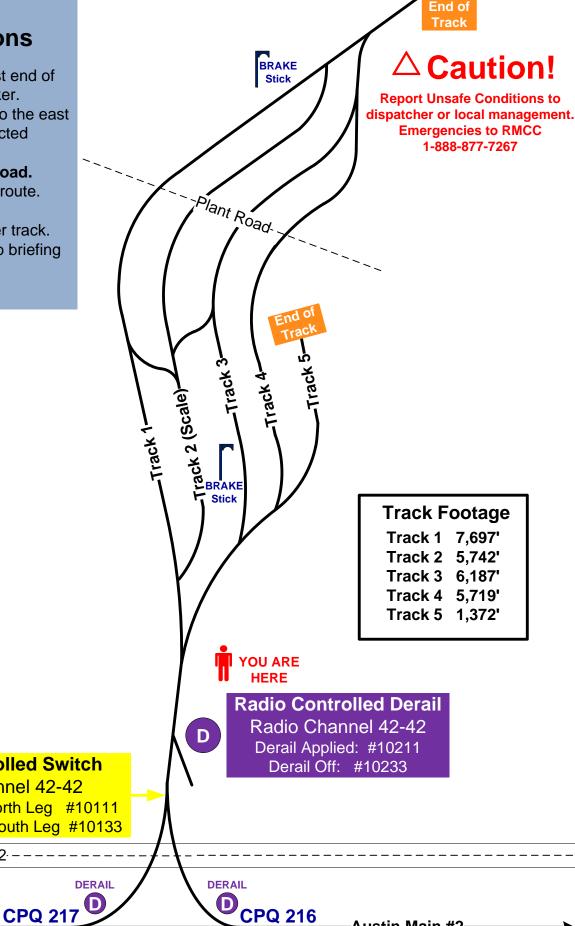

Austin Main #2-



Radio Controlled Switch Radio Channel 42-42

Switch Normal: North Leg #10111 Switch Reverse: South Leg #10133

FM 1102

Austin Main #2-